
CONTROL PANEL PARTS

For Model: SF387PEYW4, SF387PEYB4 (White) (Almond) (Black)

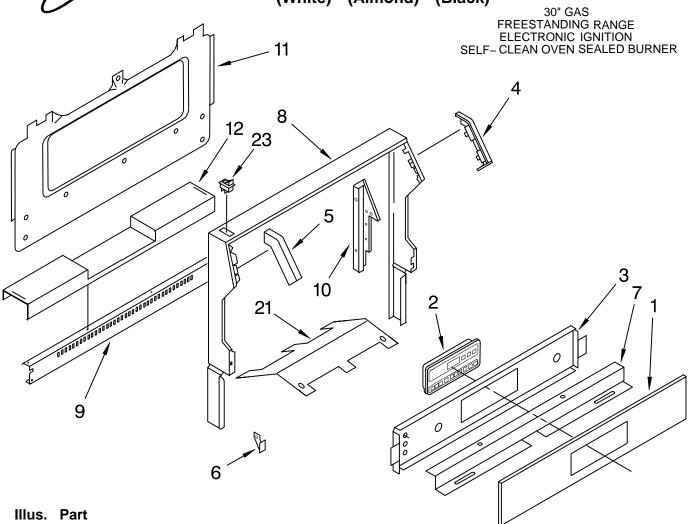


Illus.	Part	
No.	No.	DESCRIPTION

1	4371844	Panel, Control
2	4371835	Control,
		Electronic Timer
3	4371834	Bracket, Timer
4	4371316	Endcap, RH
5	4371317	Endcap, LH
6	4371536	Cap, Filler
7	4371836	Retainer, Timer
8	4371534	Trim, Wrapper
9	4371535	Trim, Deflector
10		Support,Backguard
	4372307	R.H.
	4372308	L.H.
11	4371300	Shield, Rear Wall
12	4371537	Deflector, Flue
21	4371655	Shield,Inner Bkgd
23	816703	Switch, Light


COOKTOP PARTS

For Model: SF387PEYW4, SF387PEYN4, SF387PEYB4 (White) (Almond) (Black)

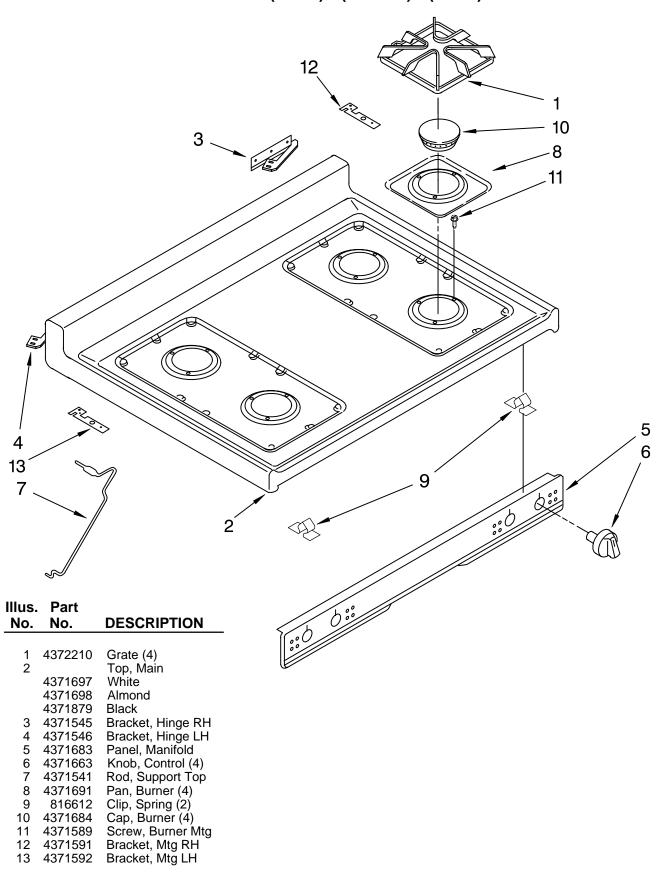

COOKTOP BURNER PARTS

For Model: SF387PEYW4, SF387PEYB4 (White) (Almond) (Black)

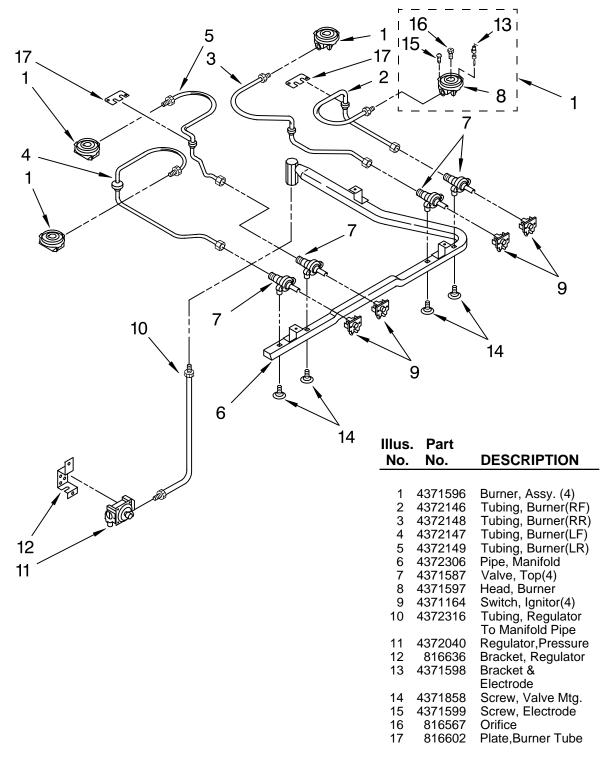

OPTIONAL PARTS NOT INCLUDED

4372091 Gas Conversion Kit (Natural Gas To LP Gas)


BROILER & OVEN BURNER PARTS

For Model: SF387PEYW4, SF387PEYN4, SF387PEYB4 (White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION	
1	816582	Baffle, Broiler Burner	
2	816584	Baffle, Oven Burner	
3 4 5	816722 816588 816624	Burner, Broiler Burner, Oven Ignitor,	5 12
6	816625	Broiler Burner Ignitor,	
8	4371583 816594 4372314	Öven Burner Ignitor, Module Mixer, Elbow Tubing, Valve To Mixing Elbow	8
10 11	816692 4372315	Valve, Safety Tubing, Valve	
12	816642	To Regulator Nut, Hex (2)	
	7	9	12 4 11 11 10

OVEN PARTS

For Model: SF387PEYW4, SF387PEYB4 (White) (Almond) (Black)

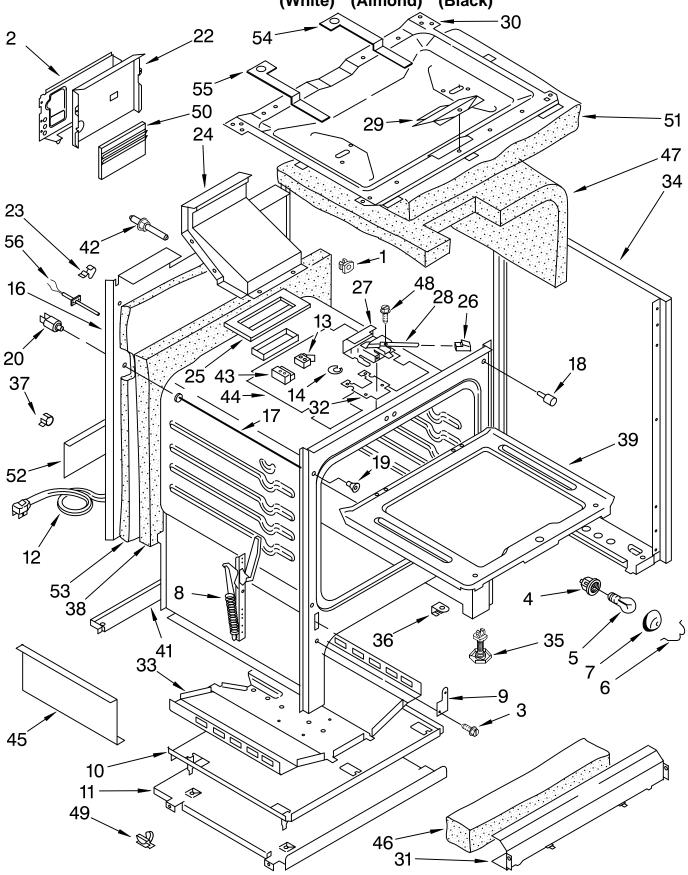


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: SF387PEYW4, SF387PEYB4 (White) (Almond) (Black)

IIIus No.	. Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	816669	Spacer, Body (8)	24	4371652	Flue Box	37	816618	Fastener, Cord
2	816659	Shield, Rear Wall	25	816620	Gasket, Flue	38	4372312	Insulation,
3	816651	Screw, Oven Bottom	26	4371144	Knob, Latch			Oven Back
4	816668	Socket, Oven Lamp	27	4371036	Latch, Door	39	4372245	Bottom, Oven
5	4371303	Bulb, Oven Light	28	4371265	Handle, Latch	41	816585	Bracket, Anti Tip
6	4371621	Retainer, Lens	29	816615	Cover, Plate	42	816639	Spacer, Stud (2)
7	816609	Lens, Oven Light	30	4372310	Burner Box	43	816637	Shield, Latch
8	4371143	Hinge, Oven Door	31	816776	Shield, Main Front	44	816658	Shield, Oven Top
9	816617	Cover, Hinge	32	816638	Shield, Latch	45	816648	Shield, Side(2)
10	4371042	Shield,	33	816660	Shield,	46	816627	Insulation, Front
		Heat (Upper)			Heat Baffle	47	816629	Insulation,
11	816657	Shield,	34		Panel, Side			Oven Wrapper
		Heat (Lower)		816709	White LH	48	4371664	Screw, Latch
12	816614	Cord, Power		816708	White RH	49	816621	Glide, Drawer
13	816640	Switch, Latch		816695	Almond LH	50	4371662	Shield, Flue
14	816633	Fastener, Push-On		816672	Almond RH	51	816628	Insulation, Ov Top
16	4372290	Back, Main		4371881	Black LH	52	816663	Shield, Wire
17	4372288	Rod, Light Switch		4371880	Black RH	53	816664	Shield, Wool
18	816608	Bumper, Front (4)	35	4371909	Screw,	54	4371527	Bracket,Maintop RH
19	4371682	Cover, Rod End			Leveler (4)	55	4371528	Bracket,Maintop LH
20	4372289	Switch, Door	36	4372313	Support,	56	816645	Probe, Oven Temp.
22	4371661	Shield, Rear Heat			Oven Bottom			
23	816577	Clip, Wire						
						l		

OVEN RACK PARTS

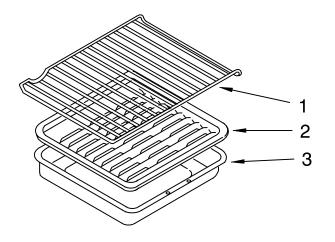

No.	No.	DESCRIPTION
1 2	4371483 816626	Rack, Oven (2) Insert,
3	0.0020	Broiler Pan Pan, Broiler

LITERATURE PARTS

LIT4372206 Use & Care Guide Installation Instructions

DOOR AND DRAWER PARTS

